

# **HITACHI**

**Instruction Manual**     **Inspire the Next**

**Model name**

**HDC-1491E/HDC-1491EP**

**14.0 Mega Pixel High Resolution**


**2.7" full colour TFT LCD**

**32MB Internal memory**

**1/2.33" CCD sensor**



# GETTING TO KNOW YOUR CAMERA

## Front View

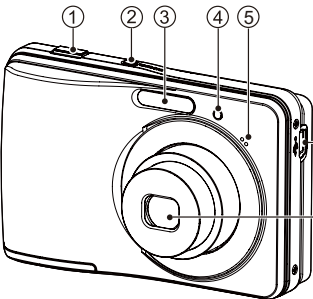

- 1. Shutter button
- 2. **ON/OFF** Power button
- 3. Flash
- 4. Self-timer LED
- 5. Microphone
- 6. USB terminal
- 7. Lens

## Rear View

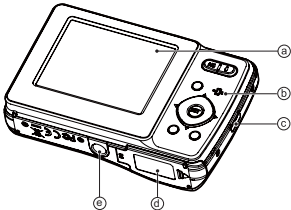 


- a. LCD monitor
- b. Status LED
- c. Strap holder
- d. Battery / Memory card cover
- e. Tripod socket

Item	Function		
	Capture Mode	Video Mode	Playback Mode
1.	Shutter button	Record button	Still image: to capture mode Video clip: to capture mode
2.	:Zooms out  :Zooms in	:Zooms out  :Zooms in	:Zooms out  :Zooms in
3.	Switches to: Video mode >capture mode	Switches to: capture mode >Video mode	Still image: to capture mode Video clip: to capture mode
4.	Focus	Focus	Next 10th image
5.	Flash	--	Next image
6.	If any scene mode is set: switches to scene mode selection screen	--	Still image: to display image Records voice memo ( if "Voice Memo" is "On"). Video clip: to play video clip
7.	Self-timer	Self-timer	Previous 10th image
8.	Compensation  >	--	Previous image
9.	Playback Mode	Playback Mode	Still image: to capture mode Video clip: to capture mode
10.	Capture menu	Video menu	Playback menu



# GETTING STARTED

## Preparation

1. Attach the camera strap.

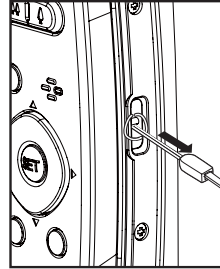

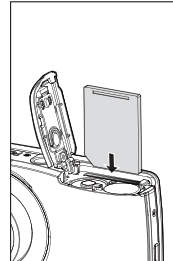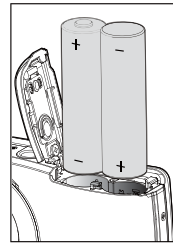


2. Open the battery/memory card cover.
3. Insert the supplied batteries with correct orientation as shown.
4. Insert an SD/SDHC memory card (Optional).
  - The camera has 32MB internal memory (23MB available for image storage), but you can load an SD/SDHC memory card to expand the camera's memory capacity.
  - Be sure to format the memory card with this camera before its initial usage.
5. Close the battery/memory card cover and make sure it is locked securely.




# CAPTURE MODE

## Capturing Images

Your camera is equipped with a 2.7" full colour TFT LCD monitor to help you compose images, playback recorded images/video clips or adjust menu settings.



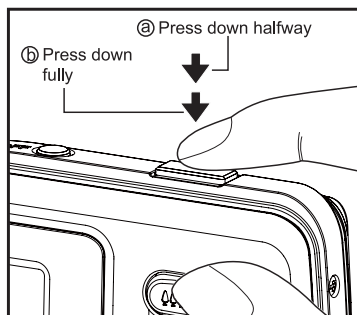




1. Press the **ON/OFF** button to turn the power on.
2. Press the **MODE** button, and set the camera mode to [  ].
3. Compose your image in the LCD monitor.
  - Turn the zoom lever to  side to zoom in on the subject, and enlarges the subject on the LCD monitor.
  - Turn the zoom lever to  side to zoom out on the subject, and provides a wider angle image.
4. Press the shutter button.
  - Pressing the shutter button down halfway automatically focuses and adjusts the exposure, and pressing the shutter button down fully captures the image.
  - The focus area frame turns green when the camera is in focus and the exposure is calculated.
  - When the focus is not suitable, the frame of the focus area turns red.




# PLAYBACK MODE

## Playing Back Still Images

You can play back the still images on the LCD monitor.

1. Press the  button.
  - The last image appears on the screen.
2. The images can be displayed in forward or reverse sequence with the  /  buttons.
  - To view the previous image, press the  button.
  - To view the next image, press the  button.
  - Turn the zoom lever to  side enlarges the image.
  - To return to normal magnification, turn the zoom lever to  side.

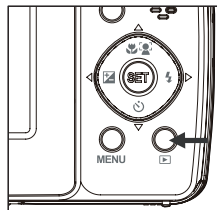


Entire image      Current position of enlargement


# VIDEO MODE

## Recording Video Clips

This mode allows you to record video clips at a resolution of 320 x 240 / 640 x 480 / 720p pixels.


1. Press the **MODE** button, and set the camera mode to [  ].
2. Compose the image.
3. Press the shutter button.

- The recording of the video clip will start.
- Pressing the shutter button one more time will end the recording of the video clip.
- The recording time depends on the storage size and the subject of the image to be recorded.
- The zoom function cannot be used during video recording.

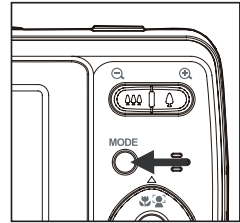

## Playing Back Video Clips


You can play back recorded video clips on the camera.


1. Press the  button.
  - The last image appears on the screen.
2. Select the desired video clip with the ◀ / ▶ buttons.
3. Press the **SET** button.
  - A press of the ▶ / ◀ buttons during playback allows fast forward play / fast reverse play.
  - To stop video playback, press the ▼ button.  
This stops playback and returns to the start of the video clip.
  - To pause video playback, press the **SET** button.  
This pauses video playback.  
To cancel pause, press the **SET** button again.

## Erasing Images

### Erasing in Photography Mode (Quick Delete Function)

The quick delete function enables you to delete the last captured image during capture.

1. Press the  button.
  - The last image appears on the screen.
2. Select the image you want to erase with the ◀ / ▶ buttons.
3. Press the **MENU** button.
4. Select [Delete] with the ▲ / ▼ buttons, and press the **SET** button.
5. Select [Single] or [All] with the ◀ / ▶ buttons, and press the **SET** button.
  - [Single]: Erases the selected image or the last image.
  - [All]: Erases all of the images except for the protected images.
6. Select [Execute] with the ◀ / ▶ buttons, and press the **SET** button.
  - To not erase, select [Cancel], and press the **SET** button.
7. To exit from the menu, press the **MENU** button.

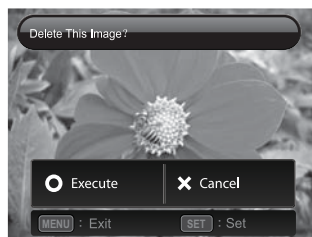


# TRANSFERRING FILES TO YOUR COMPUTER

## System Requirement

Windows	Macintosh
<ul style="list-style-type: none"> <li>■ Pentium III 1GHz or equivalent</li> <li>■ Windows XP/Vista/7</li> <li>■ 512MB RAM</li> <li>■ 150MB available hard disk space</li> <li>■ CD-ROM drive</li> <li>■ Available USB port</li> </ul>	<ul style="list-style-type: none"> <li>■ PowerPC G3/G4/G5</li> <li>■ OS 10.3.9 or later</li> <li>■ 256MB RAM (512 MB recommended)</li> <li>■ 128MB available hard disk space</li> <li>■ CD-ROM drive</li> <li>■ Available USB port</li> </ul>

## Downloading Your Files

1. Connect one end of the USB cable to an available USB port on your computer.
2. Connect the other end of the USB cable to the USB terminal on the camera.
3. Turn on your camera.
4. Select [PC] using the ▲ / ▼ buttons and press the **SET** button.
5. From the Windows desktop, double click on "My Computer".
6. Look for a new "removable disk" icon.
  - This "removable disk" is actually the memory (or memory card) in your camera. Typically, the camera will be assigned drive letter "e" or higher.
7. Double click on the removable disk and locate the DCIM folder.
8. Double click on the DCIM folder to open it to find more folders.
  - Your recorded images and video clips will be inside these folders.
9. Copy & Paste or Drag-N-Drop image and video files to a folder on your computer.

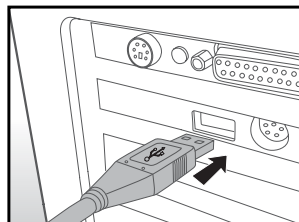

This symbol mark [crossed-out wheeled bin] indicates separate collection of waste batteries in the EU countries. The batteries provided with this product shall not be treated as household waste. Please use the return and collection systems available in your country for the disposal of the waste batteries.

If a chemical symbol is printed beneath the symbol mark, this chemical symbol means that the batteries contains a heavy metal at a certain concentration. It is indicated as follows:

Hg: mercury, Cd: cadmium, Pb: lead.



## FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

### **Note:**

This equipment has been tested and found to comply with the limits for Class B digital devices, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Use of shielded cable is required to comply with Class B limits in Subpart B of Part 15 of the FCC rules.

Do not make any changes or modifications to the equipment unless otherwise specified in the manual. If such changes or modifications should be made, you could be required to stop operation of the equipment.

### **Notice**

If static electricity or electromagnetism causes data transfer to discontinue midway (fail), restart the application or disconnect and connect the communication cable (USB, etc.) again.

# **READ THIS FIRST**

## **Trademark Information**

- Microsoft® and Windows® are U.S. registered trademarks of Microsoft Corporation.
- Pentium® is a registered trademark of Intel Corporation.
- Macintosh is a trademark of Apple Inc.
- SD™ is a trademark.
- SDHC™ is a trademark.
- Other names and products may be trademarks or registered trademarks of their respective owners.

## **Product Information**

- Product design and specifications are subject to change without notice. This includes primary product specifications, software, software drivers, and user's manual. This User Manual is a general reference guide for the product.
- The product and accessories that come with your camera may be different from those described in this manual. This is due to the fact that different retailers often specify slightly different product inclusions and accessories to suit their market requirements, customer demographics, and geographical preferences. Products very often vary between retailers especially with accessories such as batteries, chargers, AC adapters, memory cards, cables, pouches, and language support. Occasionally a retailer will specify a unique product colour, appearance, and internal memory capacity. Contact your dealer for precise product definition and included accessories.
- The illustrations in this manual are for the purpose of explanation and may differ from the actual design of your camera.
- The manufacturer assumes no liability for any errors or discrepancies in this user manual.

# SAFETY INSTRUCTIONS

Read and understand all **Warnings** and **Cautions** before using this product.

## Warnings

**If foreign objects or water have entered the camera, turn the power off and remove the batteries.**

Continued use might cause fire or electric shock. Consult the store of purchase.



**If the camera has fallen or its case has been damaged, turn the power off and remove the batteries.**

Continued use might cause fire or electric shock. Consult the store of purchase.



**Do not disassemble, change or repair the camera.**

This might cause fire or electric shock. For repair or internal inspection, ask the store of purchase.



**Use the supplied AC adapter only with the indicated power supply voltage.**

Use with any other power supply voltage might cause fire or electric shock.



**Do not use the camera in areas near water.**

This might cause fire or electric shock. Take special care during rain, snow, on the beach, or near the shore.



**Do not place the camera on inclined or unstable surfaces.**

This might cause the camera to fall or tilt over, causing damage.



**Keep the batteries out of the reach of children.**

Swallowing the batteries might cause poisoning. If the batteries are accidentally swallowed, immediately consult a physician.



**Do not use the camera while you are walking, driving or riding a motorcycle.**

This might cause you to fall over or result in traffic accident.



**Please use batteries with complete external seals.**

Do not use batteries from which the seals have been damaged or removed. This may cause leakage, explosion, or injury.



## Cautions

**Load the batteries paying careful attention to the polarity (+ or –) of the terminals.**

Loading the batteries with their polarities inverted might cause fire and injury, or damage to the surrounding areas due to the battery rupturing or leaking.



---

**Do not fire the flash close to anyone's eyes.**

This might cause damage to the person's eyesight.



---

**Do not subject the LCD monitor to impact.**

This might damage the glass on the screen or cause the internal fluid to leak. If the internal fluid enters your eyes or comes into contact with your body or clothes, rinse with fresh water. If the internal fluid has entered your eyes, consult a physician to receive treatment.



---

**A camera is a precision instrument. Do not drop it, strike it or use excessive force when handling the camera.**

This might cause damage to the camera.



---

**Do not use the camera in humid, steamy, smoky, or dusty places.**

This might cause fire or electric shock.



---

**Do not remove the batteries immediately after long period of continuous use.**

The batteries become hot during use. Touching a hot battery might cause burns.



---

**Do not wrap the camera or place it in cloth or blankets.**

This might cause heat to build up and deform the case, resulting in fire. Use the camera in a well-ventilated place.



---

**Do not leave the camera in places where the temperature may rise significantly, such as inside a car.**

This might adversely affect the case or the parts inside, resulting in fire.



---

**Before you move the camera, disconnect cords and cables.**

Failure to do this might damage cords and cables, resulting in fire and electric shock.



## Notes on Battery Usage

When you use the batteries, carefully read and strictly observe the **Safety Instructions** and the notes described below:

- Use only the specified batteries.
- Avoid extremely cold environments as low temperatures can shorten the battery life and reduce camera performance. Therefore Ni-MH rechargeable batteries are highly recommended.
- When you are using a new rechargeable batteries or rechargeable batteries that have not been used for an extended period of time (the batteries that passed the expiry date are exception), it may affect the number of images that can be captured. Therefore, to maximize their performance and lifetime, we recommend that you fully charge the batteries and discharge them for at least one complete cycle before use.
- The batteries may feel warm after a long period of continuous use of the camera or the flash. This is normal and not a malfunction.
- The camera may feel warm after a long period of continuous use. This is normal and not a malfunction.
- If the batteries are not to be used for a long period of time, remove them from the camera to prevent leakage or corrosion and store them after no battery power is left. Stored for a long time in a fully charged condition, their performance may be impaired.
- Always keep the battery terminals clean.
- There is a risk of explosion if the batteries are replaced by an incorrect type.
- Dispose of used batteries according to the recycle instructions.
- Charge the rechargeable batteries fully before using for the first time.
- Never use batteries of different types (together) or mix old and new batteries.
- Never use manganese batteries.
- To prevent short-circuiting or fire, keep the batteries away from other metal objects when carrying or storing.



This symbol mark [crossed-out wheeled bin] indicates separate collection of waste batteries in the EU countries. The batteries provided with this product shall not be treated as household waste. Please use the return and collection systems available in your country for the disposal of the waste batteries.

If a chemical symbol is printed beneath the symbol mark, this chemical symbol means that the batteries contains a heavy metal at a certain concentration. It is indicated as follows:

Hg: mercury, Cd: cadmium, Pb: lead.

# CONTENTS

## **7 INTRODUCTION**

- 7 Overview
- 7 Package Contents

## **8 GETTING TO KNOW YOUR CAMERA**

- 8 Front View
- 8 Rear View
- 9 LCD Monitor Display

## **11 GETTING STARTED**

- 11 Preparation
- 12 Initial Settings

## **14 CAPTURE MODE**

- 14 Capturing Images
- 15 Setting the Scene Mode
- 16 Taking Images with Intelligent Scene mode
- 17 Setting the Panorama Mode
- 17 Taking Images When the Smile Feature Is On
- 18 Recording Shots using Face Detection Technology
- 18 AF Tracking Mode
- 19 Self-portrait Function
- 19 Find Blur Function

## **20 VIDEO MODE**

- 20 Recording Video Clips
- 20 Playing Back Video Clips

## **21 PLAYBACK MODE**

- 21 Playing Back Still Images
- 21 Playback Display
- 22 Removing Red-eye
- 22 Dynamic Lighting Feature
- 23 Protecting Images
- 24 DPOF Settings
- 25 Erasing Images

## **26 MENU OPTIONS**

- 26 Capture Menu
- 28 Video Menu

- 29 Playback Menu

- 30 Setup Menu

## **32 TRANSFERRING FILES TO YOUR COMPUTER**

- 32 Downloading Your Files

## **32 USING THE CAMERA AS A PC CAMERA**

## **33 EDITING SOFTWARE INSTALLATION**

## **34 SPECIFICATIONS**

## **35 APPENDIX**

- 35 Possible Number of Shots
- 36 Troubleshooting

# INTRODUCTION

## Overview

Congratulations on your purchase of the new digital camera.

Capturing high-quality digital images is fast and easy with this state-of-the-art smart camera. Equipped with a 14.0-megapixel CCD, this camera is capable of capturing images with a resolution of up to 4288X3216 pixels.

## Package Contents

Carefully unpack your camera and ensure that you have the following items:

### **Common Product Components:**

- Digital Camera
- Quick Start Guide
- Software CD-ROM
- USB cable
- Camera strap
- Camera pouch
- 2 x AA size batteries

### **Common (Optional) Accessories:**


- SD/SDHC memory card



- 
- Accessories and components may vary by retailer.



# GETTING TO KNOW YOUR CAMERA

## Front View

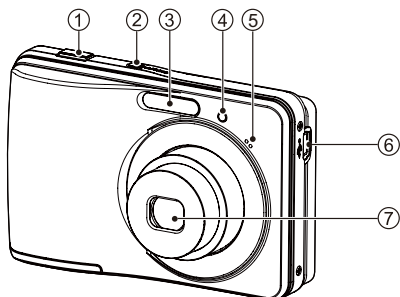

1. Shutter button
2. **ON/OFF** Power button
3. Flash
4. Self-timer LED
5. Microphone
6. USB terminal
7. Lens

## Rear View

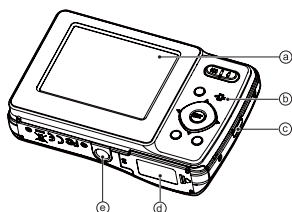 

- a. LCD monitor
- b. Status LED
- c. Strap holder
- d. Battery / Memory card cover
- e. Tripod socket


Item	Function		
	Capture Mode	Video Mode	Playback Mode
1.	Shutter button	Record button	Still image: to capture mode Video clip: to capture mode
2.	:Zooms out  :Zooms in	:Zooms out  :Zooms in	:Zooms out  :Zooms in
3.	Switches to: Video mode >capture mode	Switches to: capture mode >Video mode	Still image: to capture mode Video clip: to capture mode
4.	Focus	Focus	Next 10th image
5.	Flash	--	Next image
6.	If any scene mode is set: switches to scene mode selection screen	--	Still image: to display image Records voice memo ( if "Voice Memo" is "On"). Video clip: to play video clip
7.	Self-timer	Self-timer	Previous 10th image
8.	Compensation  >	--	Previous image
9.	Playback Mode	Playback Mode	Still image: to capture mode Video clip: to capture mode
10.	Capture menu	Video menu	Playback menu



## LCD Monitor Display

### Capture mode

1. Zoom status
2. Available number of shots
3. Storage media
  - [INT] Internal memory (no card)
  - [SD] SD/SDHC memory card
4. Battery condition
  - [Full] Full battery power
  - [Med] Medium battery power
  - [Low] Low battery power
  - [Empty] No battery power
5. Focus setting
  - [Auto] Auto
  - [AF-Track] AF Tracking
  - [Face-Detect] Face Detect
  - [Macro] Macro
  - [Infinity] Infinity
6. Flash mode
  - [Flash On] Auto
  - [Flash On] Flash On
  - [Flash Off] Flash Off
  - [Red-eye] Red-eye
  - [Slow Sync] Slow Sync
  - [Pre-flash] Pre-flash
7. Exposure compensation
8. Self-timer & Self-portrait icon
  - [Off] Off
  - [Self-portrait] Self-portrait
  - [2 sec.] 2 sec.
  - [10 sec.] 10 sec.
  - [10+2 sec.] 10+2 sec.
9. Histogram
10. Image size resolution
  - [4288 x 3216] 4288 x 3216
  - [3264 x 2448] 3264 x 2448
  - [2304 x 1728] 2304 x 1728
  - [1600 x 1200] 1600 x 1200
  - [VGA] 640 x 480
11. Set key: SCN hint icon
12. Main focus area
13. Date and time
14. Quick shot
15. Capture mode icon
  - [Single] Single
  - [Continuous] Continuous
  - [AEB] AEB (Auto Exposure Bracketing)
16. White balance
  - [Auto] Auto
  - [Incand.] Incand.
  - [Fluoresc.1] Fluoresc.1
  - [Fluoresc.2] Fluoresc.2
  - [Daylight] Daylight
  - [Cloudy] Cloudy
  - [Manual WB] Manual WB

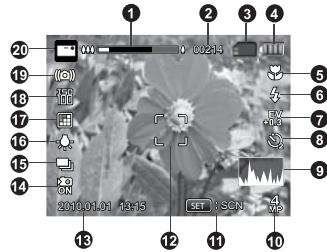

17. Image quality
  - [Fine] Fine
  - [Standard] Standard
  - [Economy] Economy
18. ISO
  - [Auto] Auto
  - [ISO 100] ISO 100
  - [ISO 200] ISO 200
  - [ISO 400] ISO 400
  - [ISO 800] ISO 800
  - [ISO 1600] ISO 1600
19. Slow shutter warning
20. Mode icon / Scene mode
  - [Auto] Auto
  - [Intelligent Scene] Intelligent Scene
  - [Smile Detection] Smile Detection
  - [Anti-shake] Anti-shake
  - [Panorama] Panorama
  - [Portrait Man] Portrait Man
  - [Portrait Lady] Portrait Lady
  - [Landscape] Landscape
  - [Sports] Sports
  - [Night Portrait] Night Portrait
  - [Night Scene] Night Scene
  - [Candlelight] Candlelight
  - [Fireworks] Fireworks
  - [Text] Text
  - [Sunset] Sunset
  - [Sunrise] Sunrise
  - [Splash Water] Splash Water
  - [Flow Water] Flow Water
  - [Snow] Snow
  - [Beach] Beach
  - [Pets] Pets
  - [Natural Green] Natural Green
  - [Program AE] Program AE


### Video mode

1. Zoom status
2. Storage media
3. Battery condition
4. Focus setting
5. Flash mode
6. Self-timer icon
7. Video resolution
8. Available recording time/Elapsed time
9. Date and time
10. Video quality
11. Audio off icon
12. Mode icon
13. Main focus area




### Playback mode - Still image playback

1. DPOF icon
2. Protect icon
3. File/Folder number
4. Storage media
5. Battery condition
6. Image size resolution
7. Date and time
8. Histogram
9. Shutter speed value/Aperture value
10. Exposure value
11. Image quality
12. ISO
13. Mode icon

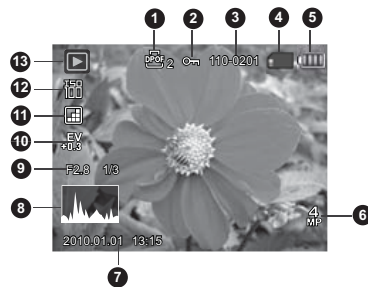

### Playback mode - Video playback


1. Protect icon
2. File/Folder number
3. Storage media
4. Battery condition
5. Total recorded time
6. Video status bar
7. Video condition icon
8. Elapsed time
9. Set key: Play/Pause hint icon
10. Down key: Stop hint icon
11. Mode icon

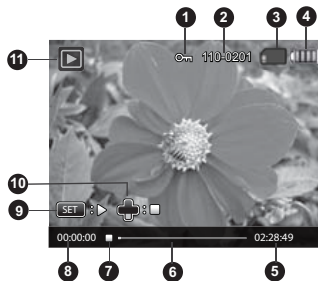



# GETTING STARTED

## Preparation


1. Attach the camera strap.

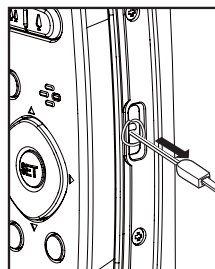

2. Open the battery/memory card cover.
3. Insert the supplied batteries with correct orientation as shown.
4. Insert an SD/SDHC memory card (Optional).
  - The camera has 32MB internal memory (23MB available for image storage), but you can load an SD/SDHC memory card to expand the camera's memory capacity.
  - Be sure to format the memory card with this camera before its initial usage.
5. Close the battery/memory card cover and make sure it is locked securely.

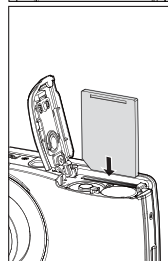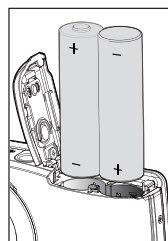

- To prevent valuable data from being accidentally erased from an SD/SDHC memory card, you can slide the write protect tab (on the side of the SD/SDHC memory card) to "LOCK".
- To save, edit, or erase data on an SD/SDHC memory card, you must unlock the card.
- To prevent damaging of an SD/SDHC memory card, be sure to turn off the power when inserting or removing the SD/SDHC memory card. If inserting or removing the SD/SDHC memory card with the power on, the camera will automatically turn off.

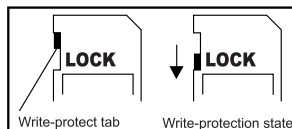

 
 
 
 
 

 
 



## Initial Settings



### Setting the Date and Time

The date/time needs to be set if and when:

- The camera is turned on for the first time.
- The camera is turned on after leaving the camera without the batteries for an extended period of time.

When the date and time information is not displayed on the LCD monitor, follow these steps to set the correct date and time.


1. Press the **MODE** button, and set the camera mode to [  ] or [  ]; or press the  button.
2. Press the **MENU** button.
3. Select the [Setup] at the end of the Menu with the  /  buttons, and press the **SET** button.
4. Select [Date/Time] with the  /  buttons, and press the **SET** button.
  - Select the item's field with the  /  buttons and adjust the value for the date and time with the  /  buttons.
  - The time is displayed in 24-hour format.
  - After confirming all settings are correct, press the **SET** button.
6. To exit from the [Setup] menu, press the **MENU** button.

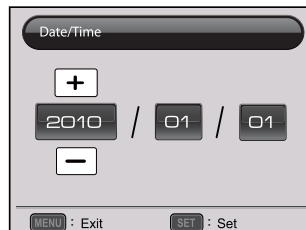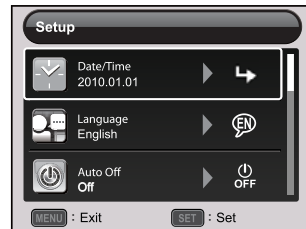

## Choosing the Language

Specify in which language menus and messages are to be displayed on the LCD monitor.


1. Press the **MODE** button, and set the camera mode to [ ] or [ ]; or press the button.
2. Press the **MENU** button.
3. Select the [Setup] at the end of the Menu with the ▲ / ▼ buttons, and press the **SET** button.
4. Select [Language] with the ▲ / ▼ buttons and press the **SET** button.
5. Select the displayed language with the ◀ / ▶ / ▲ / ▼ buttons and press the **SET** button.
  - The setting will be stored.
6. To exit from the [Setup] menu, press the **MENU** button.

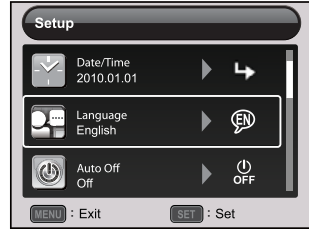

## Formatting the Memory Card or Internal Memory

This utility formats the memory card (or internal memory) and erases all stored images and data.

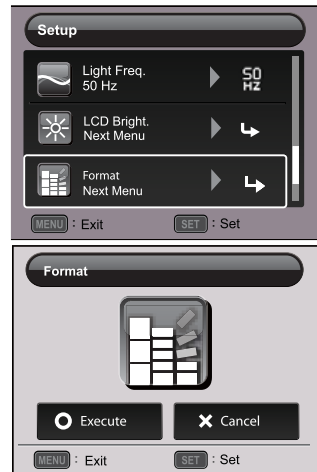


1. Press the **MODE** button, and set the camera mode to [ ] or [ ]; or press the button.
2. Press the **MENU** button.
3. Select the [Setup] at the end of the Menu with the ▲ / ▼ buttons, and press the **SET** button.
4. Select [Format] with the ▲ / ▼ buttons, then press the **SET** button.
5. Select [Execute] with the ◀ / ▶ buttons, and press the **SET** button.
  - To cancel formatting, select [Cancel] and press the **SET** button.
6. To exit from the [Setup] menu, press the **MENU** button.




# CAPTURE MODE
 
## Capturing Images


Your camera is equipped with a 2.7" full colour TFT LCD monitor to help you compose images, playback recorded images/video clips or adjust menu settings.


1. Press the **ON/OFF** button to turn the power on.
2. Press the **MODE** button, and set the camera mode to [  ].
3. Compose your image in the LCD monitor.
  - Turn the zoom lever to  side to zoom in on the subject, and enlarges the subject on the LCD monitor.
  - Turn the zoom lever to  side to zoom out on the subject, and provides a wider angle image.
4. Press the shutter button.
  - Pressing the shutter button down halfway automatically focuses and adjusts the exposure, and pressing the shutter button down fully captures the image.
  - The focus area frame turns green when the camera is in focus and the exposure is calculated.
  - When the focus is not suitable, the frame of the focus area turns red.

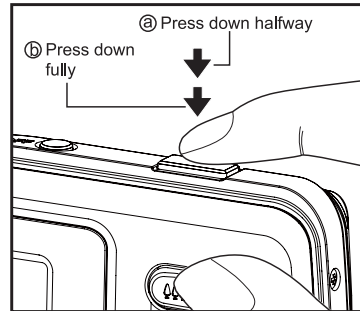


## Setting the Scene Mode

By simply selecting one of the available 23 scene modes, you can capture the image with the most appropriate settings.



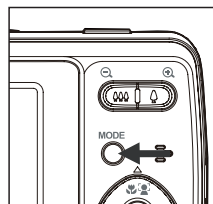



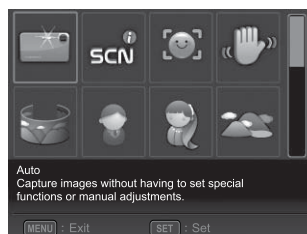



1. Press the **MODE** button, and set the camera mode to [  ], and press the **SET** button.
















2. Select the desired scene mode with the ◀ / ▶ / ▲ / ▼ buttons, and press the **SET** button.
3. Compose the image and press the shutter button.




The table below will help you choose the appropriate scene mode:

Scene mode	Description
 Auto	Select this mode when you want to capture images without having to set special functions or manual adjustments.
 Intelligent Scene	Select this mode when you want the camera to select an ideal shooting mode according to environment automatically.
 Smile Detection	Select this mode to automatically capture an image when a smiling face is detected.
 Anti-shake	This mode minimizes the influences of hand shaking when you want to capture an image.
 Panorama	Select this mode when you want to capture a series of shots then stitch them together with software to make a single photo on the computer.
 Portrait Man	Select this mode when you want to capture an image that makes a man stand out against a blurred background.
 Portrait Lady	Select this mode when you want to capture an image that makes a lady stand out against a blurred background.
 Landscape	Select this mode when you want to capture an image with infinity focus, hard sharpness and high saturation.
 Sports	Select this mode when you want to capture fast-moving subjects.
 Night Portrait	Select this mode when you want to capture people with an evening or night scene background.

Scene mode	Description
 Night Scene	Select this mode when you want to capture dark scenes such as night views.
 Candlelight	Select this mode when you want to capture photos of candlelight scene, without spoiling the ambience.
 Fireworks	Select this mode when you want to capture fireworks clearly with optimal exposure. The shutter speed becomes slower, so using a tripod is recommended.
 Text	Select this mode when you want to capture an image that contains black and white subjects like printed documents.
 Sunset	Select this mode when you want to capture a sunset. This mode helps keep the deep hues in the scene.
 Sunrise	Select this mode when you want to capture a sunrise. This mode helps keep the deep hues in the scene.
 Splash Water	Select this mode when you want to capture photos of splashing water.
 Flow Water	Select this mode when you want to capture the soft flowing water.
 Snow	Select this mode when you want to capture clear snow scenes without darkened subjects and bluish tint.
 Beach	Select this mode when you want to capture bright beach scenes and sunlit water surfaces.
 Pets	Select this mode when you want to capture your pets. Shoot from their eye level.
 Natural Green	Select this mode when you want to capture the green scenery background such as forest. This mode helps to brighten the colours.
 Program AE	This mode allows you to manually set parameters other than the shutter speed and the aperture value.

## Taking Images with Intelligent Scene mode


In this Intelligent Scene mode, the camera can sense the ambient conditions and automatically select the ideal shooting mode.

1. Press the **MODE** button, and set the camera mode to [  ], and press the **SET** button.
2. Select [Intelligent Scene] with the ◀ / ▶ / ▲ / ▼ buttons, and press the **SET** button.
  - The camera can automatically select best mode for the shooting scene from [Auto] / [Landscape] / [Backlight] / [Portrait] / [Night] / [Night Portrait] / [Macro].
3. Compose the image, and press the shutter button down fully.





## Setting the Panorama Mode


This mode is designed to make it easier to take a series of shots then stitch them together with software to make a single image. You can capture a photographic subject that won't fit into a single frame, such as a landscape, and stitch it together later with a program such as Arcsoft Panorama Maker<sup>®</sup> 4.0 application.

1. Press the **MODE** button, and set the camera mode to [  ], and press the **SET** button.
2. Select [Panorama] with the ◀ / ▶ / ▲ / ▼ buttons, and press the **SET** button.
3. Select the photographic direction with the ◀ / ▶ buttons.
4. Shoot the first image.
  - The next image appears beside the previous image.
5. Orient the camera so that the second frame overlaps a small portion of the photographic subject of the first image and press the shutter button to capture the next image.
6. Follow the same steps to capture subsequent images in the sequence.
7. Finish the sequence by pressing the **MENU** button or switch to another mode after the last image has been recorded.

## Taking Images When the Smile Feature Is On




With the camera's new "smile detection" function, this camera detects smiles so you do not miss those special moments in life.

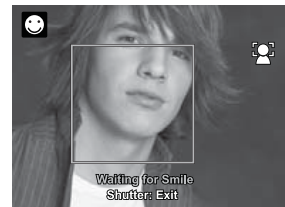
1. Press the **MODE** button, and set the camera mode to [  ], and press the **SET** button.
2. Select [Smile Detection] with the ◀ / ▶ / ▲ / ▼ buttons, and press the **SET** button.
3. Compose the image, and press the shutter button down fully.
4. Once the camera detects a smile, it will automatically capture 3 images (by default, the flash mode setting is set to  ).
  - If the [Capture Md.] is set to [Single], the camera will only capture an image after it detects a smile.
  - When capturing group shots (if the number of people is more than 1), the camera will automatically capture the image(s) when it detects two smiles.
  - If the camera does not detect a smile within 5 seconds, the camera returns to preview display.
  - Press the shutter button once again to reactivate this function.



## Recording Shots using Face Detection Technology

Face Detection Technology can identify and focus on the human faces in the image. This advanced function simultaneously detects up to 10 human faces regardless of their position in the scene.

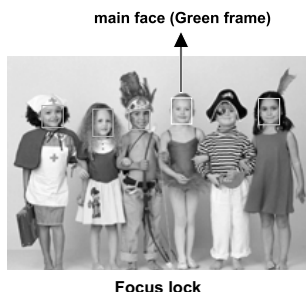


1. Press the **MODE** button, and set the camera mode to [  ].
2. Press the  button, and select [  ] icon with the ◀ / ▶ buttons. Press the **SET** button.
  - With Face Detection turned on, the camera identifies main face (white frame) and subsidiary faces (gray frames).
  - If the camera cannot detect and track any faces, there will be no frame shown on the screen.
3. Press the shutter button halfway down to lock the focus.
  - When the main face is in focus, the white frame simultaneously turns green. Otherwise, it turns red.
4. Press the shutter button down fully to capture your image.



- Subjects that are not suitable with this function:
  - a. A person is wearing glasses, sunglasses, or face is covered with hat or hair.
  - b. A person turns sideways.




 
## AF Tracking Mode

Use this option to take pictures of moving subject.

1. Press the **MODE** button, and set the camera mode to [  ].
2. Press the  button, and select [  ] icon with the ◀ / ▶ buttons. Press the **SET** button.
3. To lock the desired tracking subject, press the ▼ button.
  - The frame automatically tracks the subject movement to focus on it continuously.
4. Press the shutter button down fully to capture your image.
  - When the camera fails to recognize or track the subject, the frame will turn red and blink. After blinking of the red frame, the camera returns to unlock display.
  - Press the ▼ button, to return to unlock display.


## Self-portrait Function

Use this function to take pictures of yourself or include yourself in pictures.

1. Press the **MODE** button, and set the camera mode to [  ].
2. Press the  button, and select [  ] icon with the ◀ / ▶ buttons. Press the **SET** button.
3. Press the shutter button.
4. If the camera detect and track any faces, after twice blinking of the self-timer LED, one image will be captured.
  - Press the shutter button to exit.
  - If it does not detect any face within 30 seconds, the camera will automatically capture an image and return to preview display.
  - Select [  ] to reactivate this function.

## Find Blur Function

With the camera's new "Find Blur" function, this camera finds the blurry photo when capture under Continuous.


1. Press the **MODE** button, and set the camera mode to [  ].
2. Press the **MENU** button, and select [Find Blur] icon with the ▲ / ▼ buttons. Set "Find Blur" on.
3. Press the shutter button to return to preview display.
4. Press the shutter button down fully to capture your image.
5. Press the **SET** (Execute) button to save the best image.
  - Press the **MENU** (Cancel) button to save all images.




# VIDEO MODE

## Recording Video Clips

This mode allows you to record video clips at a resolution of 320 x 240 / 640 x 480 / 720p pixels.


1. Press the **MODE** button, and set the camera mode to [  ].
2. Compose the image.
3. Press the shutter button.
  - The recording of the video clip will start.
  - Pressing the shutter button one more time will end the recording of the video clip.
  - The recording time depends on the storage size and the subject of the image to be recorded.
  - The zoom function cannot be used during video recording.

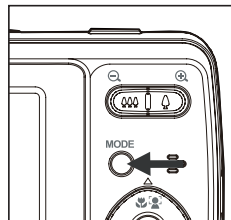

- When recording a video clip, the flash and "10+2 sec." self-timer function cannot be used.
- If the write speed of your SD/SDHC memory card is not fast enough for recording video clips in the currently selected quality, the video recording will stop. In this case, select a video quality lower than the current one.

## Playing Back Video Clips

You can play back recorded video clips on the camera.

1. Press the  button.
  - The last image appears on the screen.
2. Select the desired video clip with the ◀ / ▶ buttons.
3. Press the **SET** button.
  - A press of the ▶ / ◀ buttons during playback allows fast forward play / fast reverse play.
  - To stop video playback, press the ▼ button.  
This stops playback and returns to the start of the video clip.
  - To pause video playback, press the **SET** button.  
This pauses video playback.  
To cancel pause, press the **SET** button again.






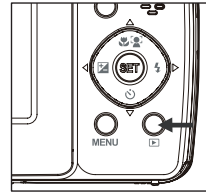
- Video clips cannot be displayed rotated or enlarged.
- You cannot play sounds because the camera does not support the speaker function. Please use PC or other media to play the videos with sounds.
- Windows Media player or QuickTime Player is recommended to play back the video clip on your computer.
- QuickTime Player is a free media player available at [www.apple.com](http://www.apple.com); and compatible with Mac and Windows computers.
- For more information about the operation of the media player, refer to its respective help documentation.

# PLAYBACK MODE

## Playing Back Still Images


You can play back the still images on the LCD monitor.

1. Press the  button.
  - The last image appears on the screen.
2. The images can be displayed in forward or reverse sequence with the ◀ / ▶ buttons.
  - To view the previous image, press the ◀ button.
  - To view the next image, press the ▶ button.
  - Turn the zoom lever to  side enlarges the image.
  - To return to normal magnification, turn the zoom lever to  side.




Entire image      Current position of enlargement




- An  icon is displayed with the video data. Video clips cannot be rotated.

## Playback Display

This function allows you to search quickly for the image that you want and playback images on the LCD monitor sequentially.

1. Press the  button.
  - The last image appears on the screen.
2. Press the ▲ button to display the next 10th image.
  - If the 1st image taken is displayed, press the ▲ button to playback the 11th image taken. Press the ▲ button again to playback the 21st image taken and so forth.
3. Press the ▼ button to display the previous 10th image.
4. Press and hold the ◀ / ▶ buttons to display the previous or next images automatically in sequential order.
  - Release the ◀ / ▶ buttons if you wish to stop the automatic playback.




- If the total number of images is less than 10, press the ▼ button jumps to the first image and press the ▲ button jumps to the last image.
- Video clips will be displayed with an  icon.

## Removing Red-eye

You can use this function to remove the red-eye effect after an image is taken.


1. Press the **▶** button.
  - The last image appears on the screen.
2. Select the image that you want to edit with the **◀ / ▶** buttons.
3. Press the **MENU** button.
4. Select [Fix Red Eyes] with the **▲ / ▼** buttons, and press the **SET** button.
5. Select [Execute] with the **◀ / ▶** buttons, and press the **SET** button.
6. View the changes on the corrected image.
7. To save your corrected image, select [Confirm] with the **◀ / ▶** buttons, and press the **SET** button.
  - When this process ends, this replaces the original image with the corrected image.

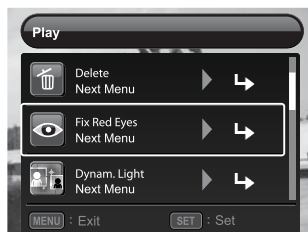

## Dynamic Lighting Feature


This feature compensates for the unfavorable lighting conditions by brightening underexposed areas and balancing overexposed areas.




1. Press the **▶** button.
  - The last image appears on the screen.
2. Select the image that you want to edit with the **◀ / ▶** buttons.
3. Press the **MENU** button.
4. Select [Dynam. Light.] with the **▲ / ▼** buttons, and press the **SET** button.
5. Select [High] or [Low] with the **◀ / ▶** buttons, and press the **SET** button.
6. View the changes on the corrected image.
7. To save your corrected image, select [Confirm] with the **◀ / ▶** buttons, and press the **SET** button.
  - When this process ends, this replaces the original image with the corrected image.

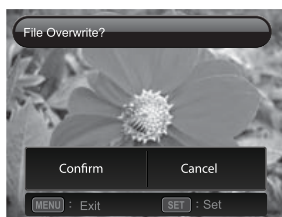

## Protecting Images


Set the data to read-only to prevent images from being erased by mistake.

1. Press the  button.
  - The last image appears on the screen.
2. Select the image that you want to protect with the ◀ / ▶ buttons.
3. Press the **MENU** button.
4. Select [Protect] with the ▲ / ▼ buttons, and press the **SET** button.
5. Select [Single] or [All] with the ◀ / ▶ buttons, and press **SET** button.
6. Select [Set] with the ◀ / ▶ buttons, and press the **SET** button.
  - Protection is applied to the image and the camera returns to the playback mode.
  - The protect icon [ON] is displayed with protected images. When [All] has been selected, [ON] is displayed with all the images.

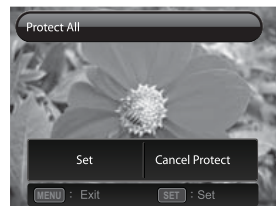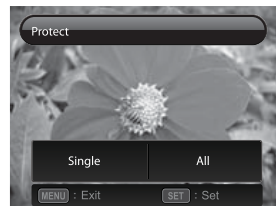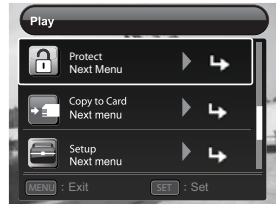

## Canceling the Protection

To cancel protection for only one image, display the image on which you want to remove the image protection.















 

1. Press the  button.
  - The last image appears on the screen.
2. Select the image that you want to cancel protection with the ◀ / ▶ buttons.
3. Press the **MENU** button.
4. Select [Protect] with the ▲ / ▼ buttons, and press the **SET** button.
5. Select [Single] or [All] with the ◀ / ▶ buttons, and press the **SET** button.
6. Select [Cancel Protect] with the ◀ / ▶ buttons, and press the **SET** button.
  - The removal of image protection is executed and the camera returns to the playback mode.





- Formatting an SD/SDHC memory card overrides protection, and erases all images regardless of their protected status.

## DPOF Settings

DPOF is the abbreviation for Digital Print Order Format, which allows you to embed printing information on your memory card. You can select the images to be printed and how many prints to make with the DPOF menu in the camera and insert the memory card to the card compatible printer. When the printer starts printing, it will read the embedded information on the memory card and print the specified images.

1. Press the  button.
  - The last image appears on the screen.
2. Select the image that you want to set DPOF with the  /  buttons.
3. Press the **MENU** button.
4. Select [DPOF] with the  /  buttons, and press the **SET** button.
  - The DPOF setting screen is displayed.
5. Select [Single] or [All] with the  /  buttons, and press the **SET** button.
  - [Single]: Sets DPOF for each individual image.
  - [All]: Sets DPOF for all images at once.
6. Select [Print Num.] with the  /  buttons, and press the **SET** button.
  - This displays the number of prints setting screen.
7. Set the number of prints with the  /  buttons, and press the **SET** button.
8. Select [Date Print] with the  /  buttons, and press the **SET** button.
  - The date setting screen appears.
9. Select date to [On] or [Off] with the  /  buttons, and press the **SET** button.
  - [On]: The date of the image will also be printed.
  - [Off]: The date of the image will not be printed.
  - The DPOF icon () is displayed on each image that has set up DPOF settings.

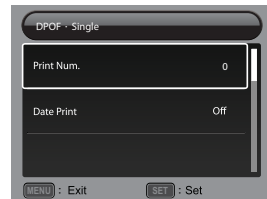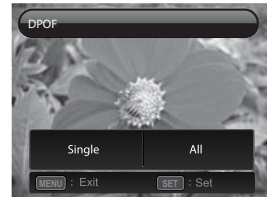


- The date that is printed on the image is the date set on the camera. To print the correct date on the image, set the date on the camera before you capture the image. Refer to the section in this manual titled "Setting the Date and Time" for further details.





## Erasing Images

### Erasing a single image / Erasing all images

The quick delete function enables you to delete the last captured image during capture.

1. Press the  button.
  - The last image appears on the screen.
2. Select the image you want to erase with the ◀ / ▶ buttons.
3. Press the **MENU** button.
4. Select [Delete] with the ▲ / ▼ buttons, and press the **SET** button.
5. Select [Single] or [All] with the ◀ / ▶ buttons, and press the **SET** button.
  - [Single]: Erases the selected image or the last image.
  - [All]: Erases all of the images except for the protected images.
6. Select [Execute] with the ◀ / ▶ buttons, and press the **SET** button.
  - To not erase, select [Cancel], and press the **SET** button.
7. To exit from the menu, press the **MENU** button.

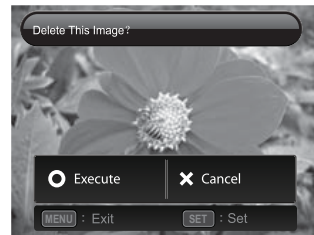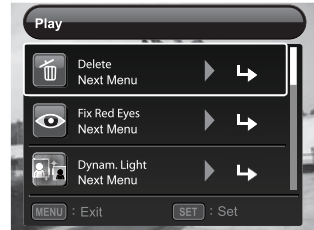

- Deleting an image will not affect sequential image numbering. For example, if you delete image number 240, the next captured image will be numbered 241 even though 240 no longer exists. In other words, an image-number is retired when an image is deleted and will not be reused or reassigned to another subsequently captured image.

# MENU OPTIONS

## Capture Menu

This menu is for the basic settings to be used when capturing still images.



1. Press the **ON/OFF** button to turn the power on.
2. Press the **MODE** button, and set the camera mode to any scene mode.
3. Press the **MENU** button to enter the [Capture] menu.
4. Select the desired option item with the **▲ / ▼** buttons, and press the **SET** button to enter its respective menu.
  - The selectable items may vary in different capture modes.
5. Select the desired setting with the **◀ / ▶** buttons, and press the **SET** button.
6. To exit from the menu, press the **MENU** button.

### Size

This sets the size of the image that will be captured.

\* 14M / 8M / 4M / 2M / VGA

### ISO

This sets the sensitivity for capturing images. When the sensitivity is raised (and the ISO figure is increased), photography will become possible even in dark locations, but the more pixelated (grainier) the image will appear.

\* Auto / ISO100 / ISO 200 / ISO 400 / ISO 800 / ISO 1600

### Quality

This sets the quality (compression) at which the image is captured.

\* Fine / Standard / Economy

### W. Balance

This sets the white balance for a variety of lighting conditions and permits images to be captured that approach the conditions that are seen by the human eye.

\*Auto / Incand. / Fluoresc.1 / Fluoresc.2 / Daylight / Cloudy / Manual WB

### Sharpness

This sets the sharpness of the image that will be captured.

\* Hard / Standard / Soft

### **Colour**

This sets the colour of the image that will be captured.

\* Standard / Vivid / Sepia / B&W / Blue / Red / Green / Yellow / Purple

### **Saturation**

This sets the saturation of the image that will be captured.

\* High / Standard / Low

### **Metering**

This sets the metering method for calculating the exposure.

- \* Center: Averages the light metered from the entire frame, but gives greater weight to the subject matter at the center.
- \* Spot: A very small portion of the center of the screen is measured to calculate the correct exposure.
- \* Average: The exposure is measured all of the image area.

### **Capture Md.**

This sets the recording method at the time of capturing images.

- \* Single: Captures one image at a time.
- \* Continuous: Permits continuous capture of up to 3 images.
- \* AEB: Permits 3 consecutive images in the order of standard exposure, underexposure and overexposure compensation.

### **Quick Shot**

If this function is set to "On", the camera takes a quick shot without focusing.

\* On / Off

### **Digi. Zoom**

This sets whether or not to use digital zoom at the time of photography.

\* On / Off

### **Find Blur**

Refer to the section in this manual titled "Find Blur" for further details.

\* On / Off

### **Preview**

This sets whether or not to display the captured image on the screen immediately after the image is captured.

\* On / Off

### **Date Print**

The date of recording can be printed directly on the still images. This function must be activated before the image is captured.

\* On / Off

### **Setup**

Refer to the section in this manual titled "Setup Menu" for further details.

## Video Menu

This menu is for the basic settings to be used when recording video clips.



1. Press the **MODE** button, and set the camera mode to [📷].
2. Press the **MENU** button to enter the [Video] menu.
3. Select the desired option item with the ▲ / ▼ buttons, and press the **SET** button to enter its respective menu.
4. Select the desired setting with the ◀ / ▶ buttons, and press the **SET** button.
5. To exit from the menu, press the **MENU** button.

### Size

This sets the size of the video clip that will be captured.

\* HD / VGA / QVGA

### Quality

This sets the quality (compression) at which the video clip is captured.

\* Fine / Standard

### Colour

This sets the colour of the video clip that will be captured.

\* Standard / Vivid / Sepia / B&W / Blue / Red / Green / Yellow / Purple

### Audio

This sets whether or not to record audio at the time of video recording.

\* On / Off

### Digi. Zoom

Refer to the section in this manual titled “Digi. Zoom” in Capture Menu for further details.

### Setup

Refer to the section in this manual titled “Setup Menu” for further details.

## Playback Menu

In the [ ] mode, choose which settings are to be used for playback.



1. Press the [ ] button.
2. Press the **MENU** button.
3. Select the desired option item with the  $\blacktriangle$  /  $\blacktriangledown$  buttons, and press the **SET** button to enter its respective menu.
4. Select the desired setting with the  $\blacktriangleleft$  /  $\blacktriangleright$  buttons, and press the **SET** button.
5. To exit from the menu, press the **MENU** button.

### Delete

Refer to the section in this manual titled “Erasing Images” for further details.

### Fix Red Eyes

Refer to the section in this manual titled “Removing Red-eye” for further details.

### Dynam. Light.

Refer to the section in this manual titled “Dynamic Lighting Feature” for further details.

### Slide Show

This function enables you to play back your still images automatically in order one image at a time.

\* 3 Sec. / 5 Sec. / 10 Sec.

### Rotate

If you wish to rotate a still image 90 degrees to the right, select +90°; if you wish to rotate it 90 degrees to the left, select -90°. Video clips cannot be rotated.

\* +90° / -90°

### DPOF

Refer to the section in this manual titled “DPOF Settings” for further details.

### Protect

Refer to the section in this manual titled “Protecting Images” for further details.

### Copy to Card

Allows you to copy your files from the camera's internal memory to a SD/SDHC memory card. Of course, you can only do this if you have a memory card installed and some files in internal memory. All files remain in the internal memory, even after copy to the SD/SDHC memory card from the internal memory.

\* Cancel / Execute

### Setup

Refer to the section in this manual titled “Setup Menu” for further details.

# Setup Menu

Set your camera's operating environment.



1. Press the **MODE** button, and set the camera mode to [ ] or [ ]; or press the button.
2. Press the **MENU** button.
3. Select the [Setup] at the end of the Menu with the / buttons, and press the **SET** button.
4. Select the desired option item with the / buttons, and press the **SET** button to enter its respective menu.
5. Select the desired setting with the / buttons, and press the **SET** button.
6. To exit from the menu, press the **MENU** button.

## Date/Time

Refer to the section in this manual titled “Setting the Date and Time” for further details.

## Language

Refer to the section in this manual titled “Choosing the Language” for further details.

## Auto Off

If no operation is performed for a specific period of time, the power to the camera is automatically turned off. This feature is useful for reducing battery usage.

\* Off / 1 Min. / 2 Min. / 3 Min.

## Beep

This sets whether or not to mute the camera sound each time you press the camera's buttons.

\* On / Off

## Display

This sets the image information display state.

\* Default / All / Off

## Fr. No. Reset

This creates a new folder. The captured images are recorded to the newly created folder from number 0001.

\* Cancel / Execute

**Light Freq.**

This camera supports different lighting frequencies: 50 Hz and 60 Hz. When photographing under fluorescent lighting, select the correct frequency setting depending in your local area's voltage.

\* 50 Hz / 60 Hz

**LCD Bright.**

Select a brightness level for the LCD monitor.

\* Standard / Bright

**Format**

Refer to section in this manual titled "Formatting the Memory Card or Internal Memory" for further details.

**Media Info.**

This displays the free capacity of the internal memory or the memory card.

**Sys. Info.**

This displays the firmware version of the camera.

**Sys. Reset**

This returns all basic settings to the camera's default settings. The time setting will not be reset.

\* Cancel / Execute

# TRANSFERRING FILES TO YOUR COMPUTER


## System Requirement

Windows	Macintosh
<ul style="list-style-type: none"><li>■ Pentium III 1GHz or equivalent</li><li>■ Windows XP/Vista/7</li><li>■ 512MB RAM</li><li>■ 150MB available hard disk space</li><li>■ CD-ROM drive</li><li>■ Available USB port</li></ul>	<ul style="list-style-type: none"><li>■ PowerPC G3/G4/G5</li><li>■ OS 10.3.9 or later</li><li>■ 256MB RAM (512 MB recommended)</li><li>■ 128MB available hard disk space</li><li>■ CD-ROM drive</li><li>■ Available USB port</li></ul>

## Downloading Your Files

1. Connect one end of the USB cable to an available USB port on your computer.
2. Connect the other end of the USB cable to the USB terminal on the camera.
3. Turn on your camera.
4. Select [PC] using the ▲ / ▼ buttons and press the SET button.
5. From the Windows desktop, double click on "My Computer".
6. Look for a new "removable disk" icon.
  - This "removable disk" is actually the memory (or memory card) in your camera. Typically, the camera will be assigned drive letter "e" or higher.
7. Double click on the removable disk and locate the DCIM folder.
8. Double click on the DCIM folder to open it to find more folders.
  - Your recorded images and video clips will be inside these folders.
9. Copy & Paste or Drag-N-Drop image and video files to a folder on your computer.

**Mac users:** Double-click the "untitled" or "unlabeled" disk drive icon on your desktop. iPhoto may automatically launch.

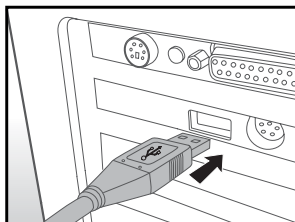

## USING THE CAMERA AS A PC CAMERA

Your camera can act as a PC camera, which allows you to videoconference with business associates, or have a real-time conversation with friends or family. Your computer system must include the items, Microphone, Sound card, Speakers or headphones, Network or Internet connection.



- Using the camera as a PC camera, Service Pack 3 is suggested to the users of Windows XP. Service Pack 3 can be downloaded by visiting <http://WWW.microsoft.com/>.



# EDITING SOFTWARE INSTALLATION

There are 3 types of software that are included on the CD-ROM:

**ArcSoft MedialImpression™** - Easily, creatively, and productively manage your multimedia files. Create your own movies or photo slide shows, and share your photo, video and music files easily through simple email attachments or popular photo printing and video sharing websites.

**Print Creations** - brings you a family of fun and easy print-project software that brings out the creativity in you. You can personalize the designs with your own digital pictures and text based on professionally designed templates and layouts. Projects can be printed at home or saved as image files for sharing with family and friends by email or the web.

**Arcsoft Panorama Maker® 4.0** - Create horizontal, vertical and 360° panorama pictures all within this one amazing program by automatically selecting an entire group of pictures with one click, and transforming photos and videos into gorgeous panoramic masterpieces. The media management and photo editing tools of this software are offered to better organize your sources and apply final touches to your work.

To install software:

1. Insert the CD-ROM that came with the camera into your CD-ROM drive.  
The welcome screen appears.
2. Click the respective software name.  
Follow the on-screen instructions to complete the installation.



- 
- For more information about the operation of the software, refer to its respective help documentation.
  - For Windows XP/Vista/7 users, please make sure to install and use the software in "Administrator" mode.
  - The software is not supported by Mac.

# SPECIFICATIONS

Item	Description
Image sensor	1/2.33" CCD sensor (14.0 megapixels)
Image resolution	Still image 14M(4288x3216),8M(3264x2448),4M(2304x1728), 2M(1600x1200) ,VGA(640x480) Video clip HD(720p)/30fps, VGA(640x480)/30fps, QVGA(320x240)/30fps
LCD monitor	2.7" full colour TFT LCD (230K pixels)
Recording media	32MB internal memory (23MB available for image storage) Supports SD/SDHC memory card (up to 32GB) (optional)
File format	DCF, JPEG (EXIF 2.2), DPOF, Motion-JPEG (AVI), HD720p/ 30fps
Lens	3x optical zoom lens Aperture range: 3(W) - 5.6(T) Focal length: 6.2mm - 18.6mm (equivalent to 35mm - 105mm on a 35mm camera)
Focus Range	Macro Wide: 0.05m to infinity Tele: 0.3m to infinity
Shutter speed	1~1/2000 sec.
Digital zoom	6x (Capture mode) 4x (Playback mode)
Flash effective range	0.5m - 3m (Wide) 0.5m - 2.1m (Tele)
Terminals	USB 2.0
Power supply	2 x AA size batteries
Dimensions	Approx. 96X 60.7 X 27.7mm (without protruding parts)
Weight	Approx. 114g (without batteries and memory card)
















\* Design and specifications are subject to change without notice.

# APPENDIX







## Possible Number of Shots

### Possible number of shots (still image)

The table shows the approximate shots that you can capture at each setting based on the capacity of the internal memory and the SD/SDHC memory card.

Size	Quality	Internal Memory	SD/SDHC memory card capacity					
			1GB	2GB	4GB SDHC	8GB SDHC	16GB SDHC	32GB SDHC
<b>14 MP</b> 4288x3216	 Fine	2	129	260	506	1045	2041	4090
	 Standard	3	184	369	719	1485	2898	5808
	 Economy	6	271	543	1059	2185	4265	8545
<b>8 MP</b> 3264 x 2448	 Fine	4	191	384	749	1545	3015	6042
	 Standard	6	271	543	1058	2183	4261	8538
	 Economy	9	414	830	1617	3335	6509	13042
<b>4 MP</b> 2304 x 1728	 Fine	6	311	624	1216	2509	4897	9812
	 Standard	10	465	931	1814	3742	7303	14633
	 Economy	15	668	1338	2606	5375	10489	21015
<b>2 MP</b> 1600 x 1200	 Fine	13	575	1151	2242	4625	9026	18084
	 Standard	19	819	1639	3193	6585	12851	25747
	 Economy	25	1094	2191	4267	8802	17176	34414
<b>VGA</b> 640 x 480	 Fine	53	2271	4545	8851	18255	35621	71369
	 Standard	69	2900	5825	11304	23315	45494	91149
	 Economy	87	3652	7309	14232	29353	57276	99999

### Possible recording time / sec (video clip)

Size	Quality	Internal Memory	SD/SDHC memory card capacity					
			1GB	2GB	4GB SDHC	8GB SDHC	16GB SDHC	32GB SDHC
<b>HD</b> 1280 x 720	 Fine	00:00:05	00:04:07	00:08:16	00:16:05	00:33:12	01:04:47	02:09:48
	 Standard	00:00:06	00:04:23	00:08:47	00:17:07	00:35:18	01:08:53	02:18:02
<b>VGA</b> 640 x 480	 Fine	00:00:11	00:07:46	00:15:33	00:30:18	01:02:30	02:01:57	04:04:20
	 Standard	00:00:13	00:09:31	00:19:04	00:37:08	01:16:35	02:29:28	04:59:29
<b>QVGA</b> 320 x 240	 Fine	00:00:32	00:22:59	00:46:00	01:29:35	03:04:47	06:00:34	12:02:24
	 Standard	00:00:44	00:31:34	01:03:12	02:03:05	04:13:52	08:15:23	16:32:32

\* We recommend a memory card of at least 10MB/Sec write speed to prevent auto stop or unexpected results. If you experience an error using a slower SD/SDHC memory card, you can set your camera's video recording to QVGA (320 x 240) and standard quality.

## Troubleshooting

Refer to the symptoms and solutions listed below before sending the camera for repairs. If the problem persists, contact your local reseller or service center.

Symptom	Cause	Solutions / Corrective Actions
The power does not come on.	The batteries are not inserted.	Load the batteries correctly.
	The batteries are exhausted.	Replace with a new set of batteries.
The batteries or camera feels warm.	Long period of continuous use of the camera or the flash.	
Even if press the shutter button, the camera does not take a picture.	The shutter button is not pressed all the way down.	Press the shutter button all the way down.
	The memory card does not have any free capacity.	Insert a new memory card, or delete unwanted files.
	The memory card is write-protected.	Remove the write-protection.
Images do not appear on the LCD monitor.	LCD monitor is dark.	Adjust the brightness of the LCD monitor in the menu.
Although it is set to auto focus, it does not focus.	The lens is dirty.	Wipe clean with a soft, dry cloth or lens paper.
	The distance to the subject is smaller than the effective range.	Get your subject within the effective focus range.
The contents on the memory card cannot be played back.	You played back a memory card that was not formatted by this camera.	Insert a memory card that was formatted on this camera.
Files cannot be deleted.	The file is protected.	Cancel protection.
	The memory card is write-protected.	Remove the write-protection.
The date and time are wrong.	The correct date and time is not set.	Set the correct date and time.
Cannot download images.	The free space on the hard disk in your computer may be insufficient.	Check whether the hard disk has space for running Windows, and if the drive for loading image files has a capacity at least that of the memory card inserted in the camera.
	No power supply.	Replace with a new set of batteries.



Language	WEEE explanation
English	<p>The mark is in compliance with the Waste Electrical and Electronic Equipment Directive 2002/96/EC (WEEE).</p> <p>The mark indicates the requirement NOT to dispose the equipment including any spent or discarded batteries as unsorted municipal waste, but use the return and collection systems available. If the batteries or accumulators included with this equipment, display the chemical symbol Hg, Cd, or Pb, then it means that the battery has a heavy metal content of more than 0.0005% Mercury, or more than 0.002% Cadmium or more than, 0.004% Lead.</p>
French	<p>Le marquage est en conformité avec la directive 2002/96/EC du DEEE (déchets d'équipements électriques et électroniques).</p> <p>Ce symbole indique l'obligation de ne pas déposer ce produit, y compris les batteries et accumulateurs vides ou déchargés, dans des décharges publiques, mais d'utiliser les systèmes spécifiques de retour et récupération disponibles.</p> <p>Si sur les piles ou accumulateurs inclus avec cet appareil, le symbole chimique Hg, Cd ou Pb est visible, cela signifie que la batterie a une teneur en métaux lourds de plus de 0.0005% de mercure, ou plus de 0,002% de cadmium, ou plus de 0,004 % Plomb.</p>
German	<p>Das Symbol ist in Übereinstimmung mit der Richtlinie 2002/96/EG über Elektro- und Elektronik Altgeräte (EAG-Richtlinie).</p> <p>Das Symbol weist darauf hin, dass das Gerät einschließlich ge- und verbrauchten Batterien bzw Akkus nicht in den Hausmüll entsorgt werden darf, sondern den hierfür bestimmten Sammelsystemen zugeführt werden muss. Falls die mit diesem Gerät gelieferten Batterien oder Akkus das chemische Zeichen Hg, Cd oder Pb zeigen bedeutet das die Batterien oder Akkus ein Schwermetall-Anteil von mehr als 0.0005% Quecksilber (Hg) , oder mehr als 0.002% Kadmium (Cd) oder mehr als 0.004% Blei (Pb) haben.</p>
Spanish	<p>El símbolo es un requisito de la Directiva europea 2002/96/EC (WEEE) acerca de los Residuos de Aparatos Eléctricos y Electrónicos. (RAEE)</p> <p>Este símbolo indica la obligación de no mezclar ni los aparatos señalizados, ni las baterías ya gastadas o desechadas, con los residuos domésticos generales, sino que deben utilizarse los sistemas de recogida específicos, disponibles para estos productos. Si en las baterías o cargadores incluidos en este equipo aparecen los símbolos químicos Hg, Cd o Pb, se indica que contienen metales pesantes en cantidades superiores a 0,0005% de Mercurio, o a 0,002% de Cadmio, o a 0,004% de plomo respectivamente.</p>
Italian	<p>Il simbolo è in accordo con la Direttiva 2002/96 EC sui Rifiuti Apparecchiature Elettriche ed Elettroniche (RAEE).</p> <p>Il simbolo indica l'obbligo della raccolta separata delle apparecchiature elettriche ed elettroniche, incluse le batterie scariche o esaurite, pertanto si raccomanda d'utilizzare i sistemi di raccolta e/o restituzione disponibili nella vostra zona per queste tipologie d'apparecchiature. Se le batterie o gli accumulatori inclusi in questa apparecchiatura recano il simbolo chimico Hg, Cd o Pb, significa che il loro contenuto di metallo pesante è alto, con una percentuale di Mercurio superiore a 0.00005%, Cadmio superiore a 0.002% o Piombo superiore a 0.004%.</p>
Swedish	<p>Märket anger överensstämmelse med Waste Electrical and Electronic Equipment Directive 2002/96/EC (WEEE).</p> <p>Märket anger kravet på att använda tillgängliga retur- och insamlingssystem och att EJ avyttra utrustningen, inkluderat förbrukade eller kasserade batterier, som osorterat kommunalt avfall. Om batterierna eller accumulatorerna som är inkluderade i produkter är märkta med de kemiska symbolerna Hg, Cd eller Pb, anger det att de innehåller tungmetaller, med mer än 0,0005% kvicksilver, eller mer än 0,002%.</p>



Language	WEEE explanation
Norwegian	Symbolet er i samsvar med Waste Electrical and Electronic Equipment Directive 2002/96/EC (WEEE). Symbolet angir kravet på å anvende tilgjengelige retur og gjenvinningssystem, og ikke benytte vanlige usorterte kommunale avfallsordninger, dette gjelder òg batterier og akkumulatorer. Dersom batterier eller akkumulatorer er merket med de kjemiske symbolene Hg, Cd eller Pb, angir dette at de inneholde tungmetaller, med mer enn 0,0005% kvikksølv, eller mer enn 0,002% kadmium, eller mer enn 0,004% bly.
Dutch	De markering is in overeenstemming met de Richtlijn 2002 / 96 / EG betreffende afgedankte elektrische en elektronische apparatuur (AEEA). De markering is een aanduiding voor de eis de apparatuur, inclusief lege of beschadigde batterijen, NIET weg te werpen bij het huishoudelijk afval, maar de beschikbare inzamelsystemen te gebruiken. Als op de batterijen of accu's van deze apparatuur de chemische symbolen Hg, Cd, of Pb staan, betekent dit dat de batterij zware metalen bevat in een concentratie van meer dan 0,0005% kwik, meer dan 0,002% cadmium of meer dan 0,004% lood.
Greek	Το σύμβολο είναι σύμφωνο με την Οδηγία της Ευρωπαϊκής Ένωσης 2002/96/EC περί Απορρίψης Ηλεκτρικών και Ηλεκτρονικών Συσκευών (WEEE). Το σύμβολο αυτό υποδεικνύει την υποχρέωση να ΜΗΝ απορρίψετε την συσκευή , καθώς και τις χρησιμοποιημένες μπαταρίες, στους κάδους των οικιακών απορριμμάτων, αλλά να χρησιμοποιείτε το σύστημα επιστροφής και περισυλλογής (ανακύκλωσης) απορριμμάτων. Αν οι μπαταρίες φέρουν τα σύμβολα Hg, Cd ή Pb, αυτό σημαίνει ότι η περιεκτικότητά τους σε βαρέα μέταλλα υπερβαίνει το 0,0005% σε υδράργυρο, ή το 0,002% σε κάδμιο ή το 0,004% σε μόλυβδο".
Danish	Mærket angiver overensstemmelse med direktivet om affald af elektrisk og elektronisk udstyr 2002/96/EF (WEEE). Mærket angiver kravet om IKKE at bortskaffe udstyret, herunder brugte eller bortkastede batterier, som usorteret affald fra husholdningen, men i stedet bruge de tilgængelige genbrugs- og indsamlingssystemer. Hvis batterierne eller akkumulatorerne, der er inkluderet med dette udstyr, har det kemiske symbol Hg, Cd eller Pb, betyder det, at batterierne har et indhold af tungmetal på mere end 0,0005 % kviksølv, eller mere end 0,002 % kadmium, eller mere end 0,004 % bly.
Finnish	Tunnus on "Waste Electrical and Electronic Equipment Directive 2002/96/EC (WEEE) mukainen. Tunnus tarkoittaa että laitetta, mukaanlukien käytettyjä tai hylättyjä paristoja EI poisteta lajittelemattomana jätteenä, vaan että käytetään käytettävissä olevia palautus- ja keräysjärjestelmiä. Jos laitteessa olevat paristot tai akut on varustettu merkeillä Hg, Cd tai Pb ylittävät raskasmetallien määrä seuraavasti; > 0.0005% elohopeaa, > 0.002% kadmiumia tai yli 0.004% lyijyä.
Czech	Značka je v souladu s Direktivou o nakládání s Elektrozařízeními a Eletroodpady 2002/96/EC (WEEE). Tato značka určuje požadavek nevyhazovat jakékoliv zařízení, které obsahuje použité, či vybité baterie do komunálního odpadu, ale vrátit tyto na dostupná místa zpětného odběru kolektivního systému. Pokud je na bateriích a akumulátorech obsažené v těchto výrobcích symbol Hg, Cd, nebo Pb, znamená to že baterie obsahují těžké kovy o obsahu více než 0.0005% Rtuti, nebo více než 0.002% Kadmia nebo více než 0.004% Olova.

**HDC-1491E/HDC-1491EP Warranty**

**HITACHI**

**Hitachi Europe Ltd.**

This product is exclusively available through Argos and in the unlikely event of a problem please return the faulty item together with proof of purchase to Argos for repair /replacement.

For further information including obtaining spare parts please contact the Hitachi Digital Camera helpline on:  
+44 (0) 870 446 0806  
or mail to [Technical@premiercamera.co.uk](mailto:Technical@premiercamera.co.uk).



HITACHI EUROPE LTD.

9PA39-4003-00